

CHAPTER REFERENCES REGARDING THIS WORKSHOP MANUAL

Use this chart to the appropriate chapter numbers for servicing your particular vehicle.

CHAPTER	MANUAL NO.	S5-YJ05E12D	
	MODEL	J05D-TI, J05E-TI	
GENERAL INTRODUCTION	GN01-001		
ENGINE INTRODUCTION	EN01-001		
ENGINE MECHANICAL	EN02-001		
AIR INTAKE SYSTEM	EN03-001		
EXHAUST SYSTEM	EN04-001		
LUBRICATING SYSTEM	EN05-001		
COOLING SYSTEM	EN06-001		
FUEL SYSTEM	EN07-001		
TURBOCHARGER	EN08-001 (VARIABLE NOZZLE TURBINE TYPE)	EN08-002 (WASTE GATE VALVE TYPE)	
FUEL INJECTION PUMP	EN09-001		
EMISSION CONTROL	EN10-001		
ALTERNATOR	EN11-001 (24V-50A)	EN11-002 (24V-60A)	
STARTER	EN12-001 (24V, 4.5 kW)	EN12-002 (24V, 5.0 kW)	
AIR COMPRESSOR	EN13-001 (154 cm ³)		
ENGINE CONTROL	EN16-001 (COMMON RAIL)		
FUEL CONTROL	DN02-001 (COMMON RAIL)		

HINO

WORKSHOP MANUAL

INDEX: ENGINE GROUP 1/2

GENERAL INTRODUCTION

ENGINE INTRODUCTION

ENGINE MECHANICAL

AIR INTAKE SYSTEM

EXHAUST SYSTEM

LUBRICATING SYSTEM

COOLING SYSTEM

FUEL SYSTEM

TURBOCHARGER

FUEL INJECTION PUMP

EMISSION CONTROL

ALTERNATOR

STARTER

AIR COMPRESSOR

ENGINE P.T.O.
(POWER TAKE-OFF)

ENGINE RETARDER

ENGINE CONTROL

HinoMotors,Ltd.

All rights reserved. This manual may not be reproduced or copied in whole in part, without the written consent of Hino Motors, Ltd.

ENGINE CONTROL

FUEL CONTROL

BRAKE CONTROL

SUSPENSION CONTROL

CAB EQUIPMENT CONTROL

OTHERS