

Bookmarks

- MAIN MENU
- COVER
- CONTENTS
- 00 FORWARD
- 01 GENERAL
- 10 STRUCTURE AND FUNCTION
- 20 TESTING, ADJUSTING AND TROUBLESHOOTING
- 30 DISASSEMBLY AND ASSEMBLY
- 40 MAINTENANCE STANDARD

Shop Manual

GD530A(W)-2
GD650A(W)-2
GD670A(W)-2

MOTOR GRADER

SERIAL NUMBERS	GD530A(W)-2EY	210098
	GD650A(W)-2EY	210098
	GD670A(W)-2EY	210098

and UP

CEBM003901

01 GENERAL

GENERAL ASSEMBLY DRAWING	01-2
GD530	01-2
GD650/670	01-2
FUEL, COOLANT, AND LUBRICANTS	01-3
ACCORDING TO AMBIENT TEMPERATURE	01-3
PROPER SELECTION OF FUEL, COOLANT AND LUBRICANTS	01-3
ENGINE OIL SPECIFICATIONS	01-5
NORMAL OPERATION	01-5
ARCTIC OPERATION	01-5
TRANSMISSION, TORQUE CONVERTER AND OIL COOLER, TANDEM DRIVE CASES, FRONT-WHEEL-DRIVE GEAR CASE, IF EQUIPPED, AND HYDRAULIC SYSTEM OIL SPECIFICATIONS	01-6
REAR-DRIVE AXLE AND CIRCLE DRIVE BRAKE HOUSING OIL SPECIFICATIONS 01-6	
DIESEL FUEL SPECIFICATIONS	01-6
COOLANT SPECIFICATIONS	01-7
GENERAL	01-7
WATER	01-7
ANTIFREEZE	01-7
SUPPLEMENTAL COOLANT ADDITIVES	01-9
MAINTENANCE OF SUPPLEMENTAL COOLANT ADDITIVES	01-9
COOLANT TESTING FOR CONDITIONER CONCENTRATION	01-9
REPLENISHING COOLANT CONDITIONER	01-9
SUPPLEMENTAL COOLANT ADDITIVE MAINTENANCE GUIDE	01-10
COOLING SYSTEM TEST KIT	01-12
CIRCLE DRIVE GEAR CASE OIL SPECIFICATIONS (HDTF)	01-12

10 STRUCTURE AND FUNCTION

ORBITROL	10-5
TRANSMISSION POWER SHIFT	10-7
OPERATION	10-9
RECOMMENDED LUBRICANT AND FILTER CHANGE INTERVALS	10-11
GENERAL LOCATION OF COMPONENTS	10-13
ALL-WHEEL-DRIVE PUMP	10-14
ROTARY GROUP	10-16
EP2 HYDRAULIC CONTROL	10-18
INTERPRETATION OF TYPE CODES	10-20
CIRCLE REVERSE MOTOR	10-21
CIRCLE REVERSE GEAR CASE MOTOR	10-21
CIRCLE REVERSE MOTOR	10-23
STEERING AND BRAKE PUMP	10-25
STEERING AND BRAKE PUMP MOUNTING	10-25
STEERING AND BRAKE PUMP	10-26
SPECIFICATIONS	10-28
AWD HYDRAULIC MOTOR	10-29
OPERATION	10-31
SPECIFICATIONS	10-32
HYDRAULIC OIL SWIVEL BLOCK	10-33
FOUR WAY	10-33
CONTROL VALVE MANIFOLDS	10-34
OPTIONAL CONTROL LEVER (SCARIFIER)	10-36
OPTIONAL CONTROL LEVERS (AUXILIARY)	10-38
CONTROL VALVES - LEFT BANK	10-40
CONTROL VALVES - R.H. BANK	10-42
VALVE SECTION	10-44
MAIN SYSTEM PUMP	10-46
MAIN SYSTEM PUMP	10-48
AWD HIC VALVE	10-50
SOLENOID VALVE CARTRIDGE	10-52
ACCUMULATOR	10-53
SPECIFICATIONS	10-54
BRAKE SYSTEM ACCUMULATORS	10-55
DRAWBAR LIFT AND DRAWBAR SIDE SHIFT ACCUMULATORS	10-55
HYDRAULIC SYSTEM OVERVIEW	10-56
STANDARD GRADER	10-56
MAIN HYDRAULIC CIRCUIT	10-57
STEERING AND BRAKE HYDRAULIC CIRCUIT	10-57
(INCLUDES LOCK PIN)	10-57
STANDARD GRADER WITH ALL WHEEL DRIVE (AWD)	10-58
MAIN HYDRAULIC CIRCUIT	10-59
ALL WHEEL DRIVE CIRCUIT	10-59
STEERING AND BRAKE HYDRAULIC CIRCUIT	10-59
(INCLUDES LOCK PIN)	10-59
MAIN HYDRAULIC CIRCUIT	10-61
SPOOL VALVE POSITIONS	10-66

STRUCTURE AND FUNCTION**TABLE OF CONTENTS**

NEUTRAL (CENTER)	10-66
PULLED (PRESSURIZED "B" PORT)	10-67
PUSHED (PRESSURIZED "A" PORT)	10-68
MAIN SYSTEM CONTROL VALVES	10-70
SCARIFIER	10-70
RIGHT AND LEFT BLADE LIFT	10-72
FLOAT VALVE	10-74
BLADE SHIFT	10-74
CIRCLE REVERSE MOTOR	10-75
MOLDBOARD TILT	10-76
ARTICULATION	10-78
CIRCLE SIDE SHIFT	10-80
LEANING WHEEL	10-82
OPTIONAL FLOAT VALVE	10-83
STEERING AND BRAKE CIRCUIT	10-84
ALL-WHEEL-DRIVE CIRCUIT	10-87
NORMAL MODE	10-88
AGGRESSIVE MODE	10-90
HYDRAULIC OPERATION	10-91
ELECTRICAL OPERATION	10-94
AWD CONTROLLER PROGRAMMING	10-96
LOCK/UNLOCK DIFFERENTIAL PUMP	10-98
CIRCLE REVERSE SLIP CLUTCH	10-100
CIRCLE REVERSE GEAR CASE	10-102
WITHOUT SLIP CLUTCH	10-102
WITH SLIP CLUTCH	10-104
MOTOR INSTALLATION	10-106
TANDEM CASE	10-108
LOCATION	10-108
DESCRIPTION	10-108
NONPLANETARY FINAL DRIVE	10-108
PLANETARY FINAL DRIVE	10-110
FINAL DRIVE IDENTIFICATION	10-112
PART NUMBER TAG	10-112
TANDEM CASE MEASUREMENT	10-112
SPECIFICATIONS	10-114
AWD GEARBOX ASSEMBLY	10-115
AWD GEARBOX	10-116
FRONT AXLE ASSEMBLY	10-118
NON ALL-WHEEL-DRIVE FRONT AXLE	10-118
AWD FRONT AXLE	10-120
FINAL DRIVE ASSEMBLY	10-122
FINAL DRIVE WITHOUT PLANETARY REDUCTION	10-122
FINAL DRIVE WITH PLANETARY REDUCTION	10-124
NO-SPIN DIFFERENTIAL CASE ASSEMBLY	10-126
INPUT QUIL ASSEMBLY	10-130
BRAKES	10-132
NO-SPIN DIFFERENTIAL BEARING QUILLS	10-134
LOCK/UNLOCK DIFFERENTIAL BEARING QUILLS	10-136
LOCK/UNLOCK DIFFERENTIAL ASSEMBLY	10-138
LOCK/UNLOCK DIFFERENTIAL CASE OIL LINE	10-140
NO-SPIN DIFFERENTIAL ASSEMBLY	10-141
NOSPIN DIFFERENTIAL	10-143
PLANETARY ASSEMBLY AND RING GEAR	10-144
NONPLANETARY FINAL DRIVE CROSS SECTION	10-146
PLANETARY REDUCTION FINAL DRIVE CROSS SECTION	10-147
MICO PARKING BRAKE	10-148

OPERATION	10-148
PARKING BRAKE INSTALLATION	10-149
PARKING BRAKE CALIPER	10-151
MICO BRAKE VALVE	10-153
OPERATION	10-153
BRAKE PEDAL LINKAGE	10-153
HYDRAULIC BRAKE LINES - WITHOUT AWD	10-155
HYDRAULIC BRAKE LINES - WITH AWD	10-157
BRAKE VALVE	10-159
PRE-DELIVERY PROCEDURES	10-161
PRE-UNLOADING CHECKS	10-161
RECORD THE SERIAL NUMBERS	10-162
COMPONENT SERIAL NUMBER LOCATION	10-163
OPERATION AND MAINTENANCE MANUAL	10-165
REVIEW THE TEXT WITH OWNER/OPERATOR	10-165
INSPECT THE MACHINE AND ATTACHMENTS	10-165
INSPECT THE PRODUCT GRAPHICS (decals)	10-165

20 TESTING, ADJUSTING AND TROUBLESHOOTING

STANDARD VALUE TABLES	20-6
TABLE OF JUDGEMENT STANDARD VALUE	20-7
FOR ENGINE ON TEST BENCH	20-7
FOR ENGINE ON CHASSIS	20-9
FOR CHASSIS	20-10
FOR CHASSIS (CONTINUED)	20-11
FOR CHASSIS (CONTINUED)	20-12
TESTING AND ADJUSTING TOOL LIST	20-15
TRANSMISSION POWER SHIFT	20-16
VOLTAGE AND ELECTRICAL POWER REQUIREMENTS	20-16
CLUTCH SOLENOID VALVE REQUIREMENTS	20-17
PRESSURE AND FLOW CHECKS	20-17
FLOW RATES	20-17
SETTING THE CLUTCH PRESSURE	20-18
TROUBLESHOOTING	20-18
FLYWHEEL DIMENSIONAL CHECKS	20-23
FLYWHEEL DIMENSIONS	20-24
CHECKING FOR THE CORRECT PILOT SLEEVE LENGTH	20-25
ALL-WHEEL-DRIVE PUMP	20-26
REXROTH	20-26
DIAGNOSTIC PORTS	20-26
TROUBLESHOOTING	20-29
CIRCLE REVERSE MOTOR	20-32
TESTS AND ADJUSTMENTS	20-32
STEERING AND BRAKE PUMP	20-33
SERVICE DIAGNOSIS	20-33
STEERING AND BRAKE PUMP TEST	20-34
SPECIFICATION	20-34
PROCEDURE	20-35
STARTUP PROCEDURE	20-36
AWD HYDRAULIC MOTOR	20-37
TROUBLESHOOTING	20-38
FOUR-WAY SWIVEL BLOCK	20-39
CONTROL VALVE MANIFOLDS	20-40
TROUBLESHOOTING	20-40
MAIN SYSTEM PUMP	20-42
TROUBLESHOOTING	20-42
HYDRAULIC CYLINDERS	20-44
TROUBLESHOOTING	20-44
FRONT WHEEL ALIGNMENT AND TURNING RADIUS ADJUSTMENT	20-45

TESTING AND ADJUSTING

PROCEDURE	20-45
PRESSURE TESTING HYDRAULIC CYLINDERS	20-48
BALL AND SOCKET SHIMMING ADJUSTMENT	20-48
ACCUMULATORS	20-49
PRECHARGE	20-49
PRESSURES	20-49
TESTS AND ADJUSTMENTS	20-49
PROCEDURE FOR ACCUMULATORS UP TO 3000 PSI	20-50
PROCEDURE FOR ACCUMULATORS UP TO 5000 PSI	20-51
HYDRAULIC CIRCUITS	20-52
RELIEVING ACCUMULATOR PRESSURE	20-53
SETTING RELIEF VALVES	20-53
GENERAL DIAGNOSIS PROCEDURE	20-54
HEAT PROBLEMS	20-54
SPECIAL TOOLS	20-55
TROUBLESHOOTING CHARTS	20-56
MAIN SYSTEM PUMP	20-56
RIGHT AND LEFT CONTROL VALVE	20-56
MOLDBOARD TILT CYLINDER	20-58
BLADE SHIFT CYLINDER	20-58
CIRCLE REVERSE MOTOR	20-59
HYDRAULIC PRESSURE TESTS	20-60
QUICK-REFERENCE PRESSURE CHART	20-61
MAIN HYDRAULIC SYSTEM SPECIFICATIONS	20-62
TEST PORT LOCATIONS	20-62
TEST PROCEDURE: Low-Pressure Standby	20-63
TEST PROCEDURE: High-Pressure Standby	20-64
STEERING AND BRAKE SYSTEM PRESSURE TEST	20-65
STEERING AND BRAKE SYSTEM SPECIFICATION	20-65
TEST PORT LOCATION	20-65
TEST PROCEDURE	20-65
AWD SYSTEM TEST	20-66
AWD SYSTEM FUNCTIONAL TEST	20-68
AWD HYDRAULIC SYSTEM PRESSURE TEST	20-71
AWD ELECTRICAL SYSTEM TESTS	20-73
PROBLEMS	20-83
Problem 1. Test lamp does not light	20-83
Problem 2. Test lamp blinks green when in reverse	20-84
Problem 3. Test lamp blinks red	20-85
Problem 4. No change between the normal mode and aggressive mode	20-85
Problem 5. System appears to lack power	20-86
Problem 6. Wheels turn when in neutral	20-86
Problem 7. Wheels don't turn either direction	20-87
Problem 8. Wheels do not turn forward	20-89
Problem 9. Wheels do not turn in reverse	20-90
Problem 10. Wheels do not stop	20-90
ALL-WHEEL-DRIVE PUMP	20-91
ADJUSTMENT	20-91
RELIEF VALVES	20-92

TESTING AND ADJUSTING

HYDRAULIC CENTERING ADJUSTMENT PROCEDURE	20-95
MECHANICAL CENTERING ADJUSTMENT PROCEDURE	20-98
AWD HYDRAULIC SYSTEM FILTERING PROCEDURE	20-99
LOCK/UNLOCK DIFFERENTIAL RELIEF VALVE	20-100
REAR AXLE COOLING SYSTEM	20-100
CIRCLE REVERSE SLIP CLUTCH	20-101
CIRCLE ADJUSTMENT	20-101
SLIP CLUTCH ADJUSTMENT	20-103
ENGINE AND TRANSMISSION GEAR RANGE TEST	20-104
TANDEM CASE	20-105
SINGLE AND DOUBLE STRAND CHAINS	20-105
ROAD TEST	20-106
GEARBOX ASSEMBLY	20-107
ALL WHEEL DRIVE	20-107
FRONT WHEEL ALIGNMENT AND TURNING RADIUS ADJUSTMENT	20-107
PROCEDURE	20-108
FRONT AXLE ASSEMBLY	20-111
PROCEDURE	20-112
FINAL DRIVE ASSEMBLY	20-115
WITH NoSPIN AND LOCK/UNLOCK DIFFERENTIAL	20-115
TROUBLESHOOTING	20-115
NoSPIN TEST	20-116
BRAKE DISC INSPECTION	20-117
CIRCLE ADJUSTMENT	20-118
FOUR SHOES	20-118
VERTICAL ADJUSTMENT	20-119
PINION ADJUSTMENT	20-120
PARKING BRAKE CALIPER	20-122
TROUBLESHOOTING	20-122
PERROT PARKING BRAKE ADJUSTMENT	20-123
MICO PARKING BRAKE ADJUSTMENT	20-124
BRAKE VALVES	20-125
REXROTH BRAKE VALVE	20-125
FREE PEDAL CLEARANCE	20-125
BRAKE PEDAL STOP	20-126
FULL BRAKE VALVE STROKE	20-127
MICO BRAKE VALVE	20-128
BRAKE PEDAL BUMPER ADJUSTMENT	20-128
BRAKE PEDAL FREE HEIGHT	20-128
BRAKE PEDAL STOP	20-129
PRESSURE TEST	20-130
PREDelivery PROCEDURES	20-131
CHECKS AND ADJUSTMENTS	20-131
FAN BELT TENSION	20-131
AIR CLEANER SYSTEM	20-131
AIR INDUCTION PRESSURE CHECK	20-132
SERVICE INDICATOR SAFETY FILTER	20-133
RADIATOR HOSES	20-134
FUEL LINES AND FITTINGS	20-135

TESTING AND ADJUSTING

WATER TRAP	20-135
TRANSMISSION FLUID LEVEL	20-135
TRANSMISSION FILL PLUG	20-136
HYDRAULIC OIL TANK LEVEL	20-136
HYDRAULIC OIL AND FUEL TANK FILL POINT	20-137
TANDEM CASE OIL LEVEL	20-137
TANDEM CASE BREATHER/FILL POINT	20-137
CIRCLE REVERSE OIL LEVEL	20-138
CIRCLE REVERSE FILL POINT	20-138
REAR AXLE OIL LEVEL	20-139
REAR AXLE OIL FILL POINT	20-139
FUEL TANK DRAIN PLUG	20-139
GREASE ZERKS	20-140
MOLDBOARD SLIDE RAILS	20-140
CONTROL LEVER LINKAGES	20-141
CONTROL VALVE LINKAGES	20-141
OIL LEVEL - AWD FRONT WHEEL GEAR	20-142
ENGINE OIL LEVEL AND FILL POINT	20-142
BATTERY WATER LEVEL	20-143
ENGINE COOLANT	20-143
ENGINE SPEED TABLE	20-144
ENGINE SPEED CHECK PROCEDURE	20-145
THROTTLE ADJUSTMENT PROCEDURE	20-146
HYDRAULIC PRESSURE TESTS	20-149
QUICK-REFERENCE PRESSURE CHART	20-150
MAIN HYDRAULIC SYSTEM SPECIFICATIONS	20-151
TEST PORT LOCATIONS	20-151
TEST PROCEDURE: Low-Pressure Standby	20-152
TEST PROCEDURE: High-Pressure Standby	20-153
STEERING AND BRAKE SYSTEM PRESSURE TEST	20-154
STEERING AND BRAKE SYSTEM SPECIFICATION	20-154
TEST PORT LOCATION	20-154
TEST PROCEDURE	20-154
AWD HYDRAULIC SYSTEM PRESSURE TEST	20-155
AWD SYSTEM SPECIFICATION	20-155
TEST PORT LOCATIONS	20-155
TEST PROCEDURE	20-156
CLUTCH PACK PRESSURE CHECK	20-157
TIRES AND RIMS	20-158
TIRE INFLATION	20-158
TIRE PRESSURES	20-158
RIM CENTERING	20-159
CONTROL VALVE OPERATION	20-160
CONTROL LEVERS - RIGHT BANK	20-161
CONTROL LEVERS - LEFT BANK	20-162
OPTIONAL EQUIPMENT	20-163
LIGHTING	20-163
WARNING LIGHTS	20-163
YARD TEST	20-163

TESTING AND ADJUSTING

BRAKE VALVES	20-164
REXROTH BRAKE VALVE	20-164
MICO BRAKE VALVE	20-167
PARKING BRAKE CALIPER	20-170
PERROT PARKING BRAKE ADJUSTMENT	20-170
MICO PARKING BRAKE ADJUSTMENT	20-171

30 DISASSEMBLY AND ASSEMBLY

ARTICULATION JOINT ASSEMBLY	30-8
SERVICING	30-9
DISASSEMBLY	30-14
CLEANING AND INSPECTION	30-16
ASSEMBLY	30-17
INSTALLATION	30-20
ORBITROL	30-24
REMOVAL	30-24
DISASSEMBLY	30-24
CLEANING AND INSPECTION	30-30
ASSEMBLY	30-31
INSTALLATION	30-37
TRANSMISSION POWER SHIFT	30-38
SPECIAL TOOLS	30-38
CHANNEL SUPPORT TOOL	30-38
CLUTCH PACK REMOVAL TOOL	30-39
CLUTCH SPRING COMPRESSION TOOL	30-40
REMOVAL	30-41
DISASSEMBLY	30-52
FRONT COVER DISASSEMBLY	30-54
MAIN CASE DISASSEMBLY	30-56
TORQUE CONVERTER DISASSEMBLY	30-58
CLUTCH PACK 1 AND 5 DISASSEMBLY (first stage)	30-60
CLUTCH PACK 2 AND 6 DISASSEMBLY (second stage)	30-62
CLUTCH PACK 3 AND 4 DISASSEMBLY (third stage)	30-64
CONTROL VALVE DISASSEMBLY	30-66
CLEANING AND INSPECTION	30-67
CLEANING	30-67
INSPECTION	30-68
REASSEMBLY	30-69
FRONT COVER REASSEMBLY	30-69
TORQUE CONVERTER ASSEMBLY	30-71
CLUTCH PACK 1 AND 5 REASSEMBLY (first stage)	30-73
CLUTCH PACK 2 AND 6 REASSEMBLY (second stage)	30-77
CLUTCH PACK 3 AND 4 REASSEMBLY (third stage)	30-80
CONTROL VALVE REASSEMBLY	30-84
MAIN CASE REASSEMBLY	30-85
TRANSMISSION/TORQUE CONVERTER REASSEMBLY	30-88
INSTALLING THE CONVERTER INTO THE TRANSMISSION	30-89
TRANSFER CASE	30-90

DISASSEMBLY AND ASSEMBLY

DISASSEMBLY	30-90
ASSEMBLY	30-92
INSTALLATION	30-94
SERVICING THE MACHINE AFTER A TRANSMISSION OVERHAUL	30-104
STARTUP PROCEDURE	30-105
ALL WHEEL DRIVE (AWD)	30-105
ALL-WHEEL-DRIVE PUMP	30-106
REMOVAL	30-106
SHAFT SEAL (IN-WARRANTY SERVICE)	30-108
CHARGE PUMP (IN-WARRANTY SERVICE)	30-110
CONTROL PISTON COVER (IN-WARRANTY SERVICE)	30-112
LEFT COVER	30-112
RIGHT COVER	30-113
REPLACING THE VALVES (IN-WARRANTY SERVICE)	30-115
BOOST PRESSURE VALVE	30-115
RELIEF VALVE	30-115
PRESSURE CUT-OFF VALVE	30-116
CONTROL DEVICE (IN-WARRANTY SERVICE)	30-117
REGULATOR VALVE (IN-WARRANTY SERVICE)	30-118
REBUILDING THE PUMP (OUT-OF-WARRANTY SERVICE)	30-119
TORQUE VALUES	30-144
INSTALLATION	30-147
CIRCLE REVERSE MOTOR (DANFOSS)	30-149
REMOVAL	30-149
DISASSEMBLY	30-149
CLEANING AND INSPECTION	30-155
ASSEMBLY	30-156
INSTALLATION	30-166
CIRCLE REVERSE MOTOR (CHAR-LYNN)	30-167
SPECIAL TOOLS	30-168
SEAL INSTALLATION TOOL	30-168
ASSEMBLY BULLET TOOL	30-169
SEAL BULLET TOOL	30-170
REMOVAL	30-171
DISASSEMBLY	30-171
CLEANING AND INSPECTION	30-173
ASSEMBLY	30-174
INSTALLATION	30-177
STEERING AND BRAKE PUMP	30-178
REMOVAL	30-178
DISASSEMBLY	30-179
CLEANING AND INSPECTION	30-182
ASSEMBLY	30-184
INSTALLATION	30-186
HYDRAULIC MOTOR	30-187
SPECIAL SERVICE TOOLS	30-187
SHAFT BEARING REMOVAL/INSTALLATION TOOL	30-187
HOUSING BEARING RACE REMOVAL TOOL	30-188
BEARING RACE INSTALLATION TOOL	30-188

DISASSEMBLY AND ASSEMBLY

SHAFT SEAL DRIVER TOOL	30-189
REMOVAL	30-190
DISASSEMBLY	30-191
CLEANING AND INSPECTION	30-195
ASSEMBLY	30-198
INSTALLATION	30-201
HYDRAULIC OIL SWIVEL BLOCK - 4 WAY	30-202
SPECIAL TOOLS	30-202
SWIVEL BLOCK SEAL TOOL	30-202
REMOVAL	30-203
DISASSEMBLY	30-204
CLEANING AND INSPECTION	30-205
ASSEMBLY	30-205
INSTALLATION	30-207
CONTROL VALVE MANIFOLDS	30-208
REMOVAL	30-208
DISASSEMBLY	30-211
CONTROL VALVE BANK	30-211
VALVE SECTION	30-213
VALVE SECTION IDENTIFICATION	30-214
CLEANING AND INSPECTION	30-215
ASSEMBLY	30-216
VALVE SECTION	30-216
CONTROL VALVE BANK	30-218
INSTALLATION	30-219
MAIN SYSTEM PUMP	30-222
REMOVAL	30-222
DISASSEMBLY	30-224
CLEANING AND INSPECTION	30-231
REASSEMBLY	30-232
INSTALLATION	30-239
HYDRAULIC INTEGRATED CIRCUIT VALVE	30-241
REMOVAL	30-241
DISASSEMBLY	30-242
HIC VALVE	30-242
SOLENOID CARTRIDGE DISASSEMBLY	30-243
CLEANING AND INSPECTION	30-244
ASSEMBLY	30-245
SOLENOID CARTRIDGE REASSEMBLY	30-245
HIC VALVE	30-246
INSTALLATION	30-247
HYDRAULIC CYLINDERS	30-249
CLEANING AND INSPECTION	30-249
STEERING CYLINDERS	30-250
REMOVAL	30-250
DISASSEMBLY	30-251
CLEANING AND INSPECTION	30-251
ASSEMBLY	30-252
INSTALLATION	30-253

DISASSEMBLY AND ASSEMBLY

LEANING WHEEL CYLINDER	30-254
REMOVAL	30-254
DISASSEMBLY	30-255
CLEANING AND INSPECTION	30-255
ASSEMBLY	30-256
INSTALLATION	30-256
MOLDBOARD TILT CYLINDERS	30-258
REMOVAL	30-258
DISASSEMBLY	30-259
CLEANING AND INSPECTION	30-259
ASSEMBLY	30-260
INSTALLATION	30-261
MOLDBOARD SIDE SHIFT CYLINDER	30-262
REMOVAL	30-262
DISASSEMBLY	30-264
CLEANING AND INSPECTION	30-264
ASSEMBLY	30-264
INSTALLATION	30-265
DRAWBAR SIDE SHIFT CYLINDER (R.H. BLADE SUSPENSION ONLY)	30-267
REMOVAL	30-267
DISASSEMBLY	30-268
CLEANING AND INSPECTION	30-268
ASSEMBLY	30-269
INSTALLATION	30-270
DRAWBAR SIDE SHIFT CYLINDER (R.H. & L.H. BIAS BLADE SUSPENSION)	30-271
REMOVAL	30-271
DISASSEMBLY	30-271
CLEANING AND INSPECTION	30-272
ASSEMBLY	30-272
INSTALLATION	30-273
DRAWBAR LIFT CYLINDERS (R.H. BLADE SUSPENSION ONLY)	30-274
REMOVAL	30-274
DISASSEMBLY	30-275
CLEANING AND INSPECTION	30-276
ASSEMBLY	30-276
INSTALLATION	30-277
DRAWBAR LIFT CYLINDERS (R.H. & L.H. BIAS BLADE SUSPENSION ONLY)	30-279
REMOVAL	30-279
DISASSEMBLY	30-281
CLEANING AND INSPECTION	30-282
ASSEMBLY	30-282
INSTALLATION	30-283
SCARIFIER CYLINDERS	30-285
REMOVAL	30-285
DISASSEMBLY	30-286
CLEANING AND INSPECTION	30-287
ASSEMBLY	30-287
INSTALLATION	30-288

DISASSEMBLY AND ASSEMBLY

LOCK PIN CYLINDER (R.H. & L.H. BIAS BLADE SUSPENSION ONLY)	30-290
REMOVAL	30-290
DISASSEMBLY	30-291
CLEANING AND INSPECTION	30-291
ASSEMBLY	30-291
INSTALLATION	30-292
ARTICULATION CYLINDERS	30-293
REMOVAL	30-293
DISASSEMBLY	30-294
CLEANING AND INSPECTION	30-295
ASSEMBLY	30-295
INSTALLATION	30-296
ACCUMULATORS	30-297
MAINTENANCE	30-297
CHECKING THE PRECHARGE	30-297
Accumulators with Parker valve p/n 5323640000.	30-298
Accumulators with Parker valve p/n 6124330000.	30-299
REMOVAL (BRAKE SYSTEM)	30-299
REMOVAL (DRAWBAR LIFT AND DRAWBAR SIDE SHIFT)	30-300
DISASSEMBLY	30-302
CLEANING AND INSPECTION	30-303
REPAIR AND REPLACEMENT	30-303
ASSEMBLY	30-303
INSTALLATION (BRAKE SYSTEM)	30-304
INSTALLATION (DRAWBAR LIFT AND DRAWBAR SIDE SHIFT)	30-304
LOCK/UNLOCK DIFFERENTIAL PUMP	30-305
REMOVAL	30-305
DISASSEMBLY	30-307
CLEANING AND INSPECTION	30-308
REPAIR AND REPLACEMENT	30-309
REASSEMBLY	30-309
INSTALLATION	30-309
CIRCLE REVERSE SLIP CLUTCH	30-311
SPECIAL TOOLS	30-311
CIRCLE SLIP CLUTCH GAUGE TOOL	30-311
REMOVAL	30-312
DISASSEMBLY	30-313
CLEANING AND INSPECTION	30-315
ASSEMBLY	30-317
INSTALLATION	30-324
RETROFITTING A STANDARD CIRCLE GEAR CASE WITH A SLIP CLUTCH	30-326
CIRCLE IDENTIFICATION	30-326
RETROFITTING INSTRUCTIONS	30-326
CIRCLE REVERSE GEAR CASE	30-328
DISASSEMBLY	30-328
CLEANING AND INSPECTION	30-335
ASSEMBLY	30-336
TANDEM CASE	30-344
SINGLE AND DOUBLE STRAND CHAINS	30-344

DISASSEMBLY AND ASSEMBLY

SERVICE/SPECIAL TOOLS	30-344
WHEEL KNOCKER TOOL	30-344
AXLE LIFTING TOOL.....	30-345
AXLE ROLLING TORQUE TOOL	30-345
SPREADER BAR AND CHAINS	30-346
REMOVAL	30-348
DISASSEMBLY	30-352
CLEANING AND INSPECTION	30-353
ASSEMBLY	30-354
INSTALLATION	30-356
GEARBOX ASSEMBLY - AWD	30-360
SERVICE/SPECIAL TOOLS	30-360
SEAL INSTALLATION TOOL	30-360
TWO-PIECE SEAL INSTALLATION	30-360
REMOVAL	30-365
DISASSEMBLY	30-370
CLEANING AND INSPECTION	30-379
ASSEMBLY	30-380
INSTALLATION	30-391
FRONT AXLE ASSEMBLY	30-396
REMOVAL	30-396
DISASSEMBLY	30-399
CLEANING AND INSPECTION	30-404
ASSEMBLY	30-405
INSTALLATION	30-415
FINAL DRIVE ASSEMBLY	30-418
NoSPIN AND LOCK/UNLOCK DIFFERENTIALS	30-418
SERVICE/SPECIAL TOOLS	30-418
SPREADER BAR AND CHAINS	30-418
DIFFERENTIAL BACKLASH TOOL (DR08-111)	30-420
PARKING BRAKE BLEEDING	30-421
FINAL DRIVE BRAKE BLEEDING	30-421
ROAD TESTING	30-422
REMOVAL	30-422
GENERAL DISASSEMBLY	30-428
DISASSEMBLY OF THE PLANETARY CARRIER	30-428
DISASSEMBLY OF THE NONPLANETARY CARRIER	30-434
DISASSEMBLY OF THE DIFFERENTIAL BRAKE PISTONS	30-438
DISASSEMBLY OF THE INPUT QUILT ASSEMBLY	30-439
DISASSEMBLY OF THE DIFFERENTIAL CASE WITH NoSPIN DIFFERENTIAL	30-441
DISASSEMBLY OF DIFFERENTIAL CASE WITH LOCK/UNLOCK DIFFERENTIAL	30-443
CLEANING AND INSPECTION	30-450
NoSPIN DIFFERENTIAL INSPECTION	30-451
LOCK/UNLOCK DIFFERENTIAL INSPECTION	30-451
PARKING BRAKE MOUNTING BRACKET	30-452
DIFFERENTIAL ASSEMBLY	30-453
NoSPIN DIFFERENTIAL CASE ASSEMBLY	30-454

DISASSEMBLY AND ASSEMBLY

LOCK/UNLOCK DIFFERENTIAL CASE ASSEMBLY	30-458
PINION GEAR ADJUSTMENTS	30-467
PINION GEAR CONE POINT ADJUSTMENT	30-467
PINION GEAR ENDPLAY ADJUSTMENT	30-469
PINION GEAR BACKLASH ADJUSTMENT	30-470
FINAL ASSEMBLY	30-472
ASSEMBLY OF THE DIFFERENTIAL BRAKE PISTONS	30-474
NONPLANETARY CARRIER ASSEMBLY	30-476
PLANETARY CARRIER ASSEMBLY	30-484
INSTALLATION	30-490
CIRCLE TOOTH REBUILD	30-496
REBUILDING THE TEETH	30-496
MICO PARKING BRAKE CALIPER	30-497
REMOVAL	30-497
BRAKE LINING REPLACEMENT	30-500
DISASSEMBLY	30-500
CLEANING AND INSPECTION	30-502
ASSEMBLY	30-503
INSTALLATION	30-505
REXROTH BRAKE VALVE	30-507
REMOVAL	30-507
DISASSEMBLY	30-510
CLEANING AND INSPECTION	30-511
ASSEMBLY	30-512
INSTALLATION	30-513

40 MAINTENANCE STANDARD

FINAL DRIVE	40-2
NO SPIN DIFFERENTIAL CASE ASSEMBLY	40-3
NO SPIN DIFFERENTIAL ASSEMBLY	40-4
FINAL DRIVE AND TANDEMS	40-5
TANDEM DRIVE	40-6
BRAKE VALVE	40-7
STEERING CYLINDER	40-8
LEANING WHEEL CYLINDER	40-9
MOLDBOARD TILT CYLINDER	40-10
MOLDBOARD SIDE SHIFT	40-11
DRAWBAR SIDE SHIFT CYLINDER	40-12
DRAWBAR LIFT CYLINDER	40-13
SCARIFIER CYLINDER	40-14
ARTICULATION CYLINDER	40-15
RIPPER CYLINDER	40-16
LUG NUTS	40-17
FRONT AXLE	40-18
POWER TILT MOLDBOARD CARRIER	40-19
FRAME	40-20
DRAWBAR AND CIRCLE	40-21
DRAWBAR LIFT	40-22
ENGINE AND TRANSMISSION	40-23
DRIVE LINE	40-24
ALTERNATOR	40-25